

MATERIAL


Bracket: Aluminum alloy 6060 T6
Screw: Stainless steel AISI 304 A2

COMPONENTS

-1 extruded profile L=50mm
-1 self-drilling screw

NOTES

- The bracket must be installed on the SKA201 bracket using the self-drilling screw provided.
- The bracket provides support for edge flashing, expansion joints, connection flashing, etc.
- For the correct fixing of the flashings, it is recommended to position them close to each bracket (span about 1000/1200mm).
- The bracket must be installed following the project designed by a qualified technician.
- SkyProof Company shall not be responsible in case of incorrect design or installation.

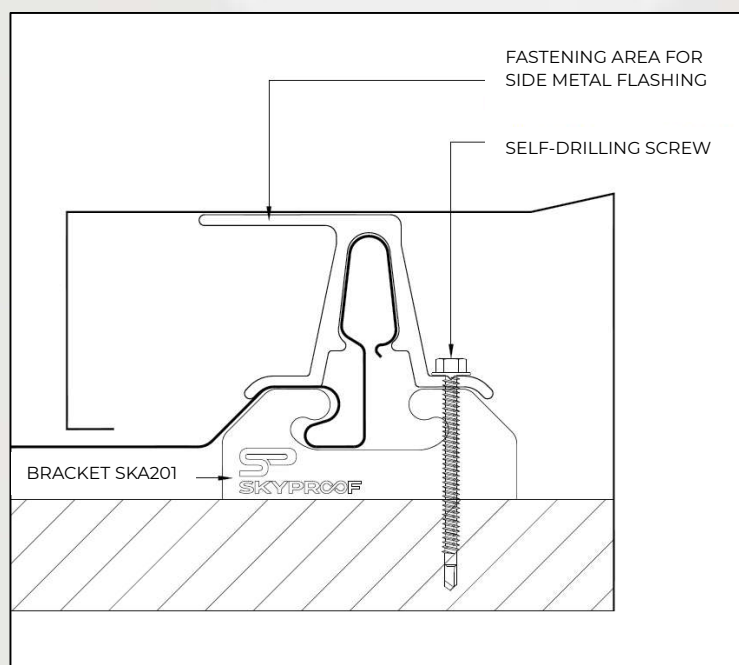

ASSEMBLY PROCEDURE

