



MATERIAL

Bracket: Aluminum alloy 6060 T6

Screw: Stainless steel AISI 304 A2


COMPONENTS

-nr. 1 extruded profile L=50mm

-nr. 1 self-drilling screw

NOTES

- The bracket must be installed near the SKA201 ridge bracket in order to create the fixed point by drilling through the sheet using the self-drilling screw provided.
- Silicone (2 cubic centimetres) must be applied on the sheet surface where the fixed point hole will be done, as shown in step 1.
- If this accessory is applied, the SKA120 fixed point **MUST NOT BE INSTALLED!**
- If a fixed point is already present using SKA120 brackets, it will be sufficient to place 1 SKA110 bracket every 2 sheets ribs **WITHOUT SCREWS, IN ORDER TO AVOID A DOUBLE FIXED POINT.**
- The bracket is also a support for the SKA130 notched ridge profile, which is fixed using rivets prior to installing the ridge flashing, as shown in step 3.
- The bracket must be installed following the project designed by a qualified technician.
- SkyProof Company shall not be responsible in case of incorrect design or installation.

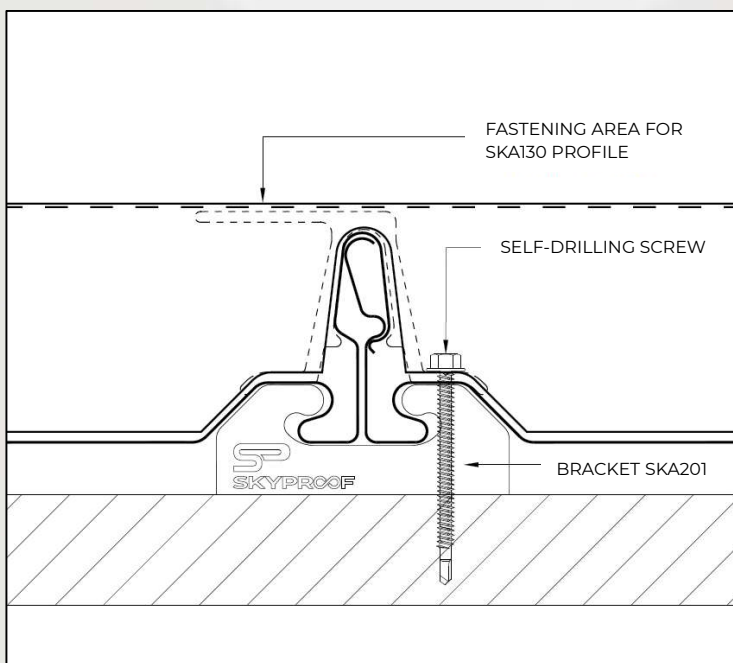

ASSEMBLY PROCEDURE

