

MATERIAL


Bracket and rivets: Stainless steel AISI 304 A2

COMPONENTS

- nr. 1 bracket L=250mm
- nr. 4 stainless steel rivets

NOTES

- This accessory must be installed as first element; mechanical locking is achieved when SKA201 bracket is installed, as it shares the fixing holes with the substructure.
- Before installing the next sheet, create the fixed point by drilling near the 4 holes on the plate and riveting.
- A fixed point must be created on each individual sheet.
- If this accessory is applied, the SKA110 fixed point **MUST NOT BE INSTALLED!**
- The bracket must be installed following the project designed by a qualified technician.
- SkyProof Company shall not be responsible in case of incorrect design or installation.

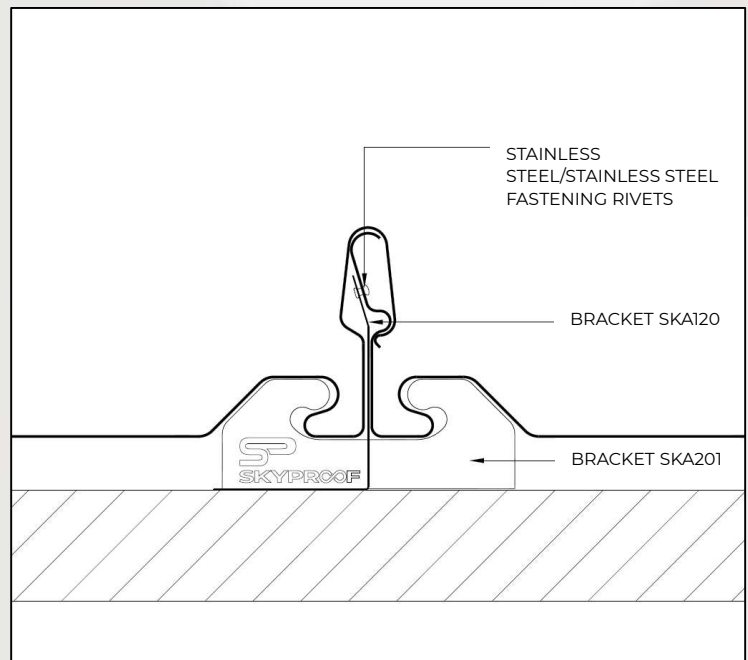

ASSEMBLY PROCEDURE

