



MATERIAL


Profile: Material and finish same of Skyproof sheet
Rivets: Stainless steel AISI 304 A2

COMPONENTI

- nr. 1 profile L=1550mm
- nr. 4 stainless steel rivets

NOTES

- This accessory must be installed after the positioning of SKA110 bracket on each rib of the sheets (fixed point).
- If a fixed point is already present using SKA120 brackets, it will be enough to place 1 SKA110 bracket every 2 sheets ribs **WITHOUT SCREWS, IN ORDER TO AVOID A DOUBLE FIXED POINT.**
- The profile must be fixed with rivets by drilling through the SKA110 brackets.
- Each profile covers 3 Skyproof sheets. Between one profile and the next, an overlap is created on the rib, which is secured by a shared rivet.
- The profile must be installed following the project designed by a qualified technician.
- SkyProof Company shall not be responsible in case of incorrect design or installation.

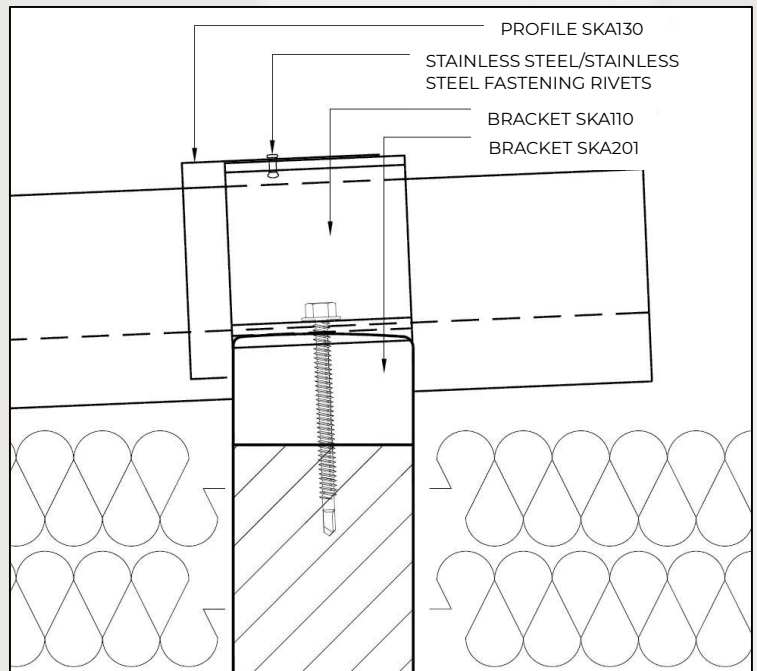

ASSEMBLY PROCEDURE

